## **DMO200**

### **Digital Micro-Ohmmeter** with USB data storage

#### **USB** data storage

All test results can be stored automatically on a standard USB memory key. The unit has a realtime clock to time and date-stamp all results. Results are written to a CSV file that can be opened by any spreadsheet program. A USB keyboard is supplied to add comments to results.

Main Output

5V 1-200A pre-settable current. Thermal and over-current protection. <2.5% ripple.

#### **mV** Input

Sense input for 4 wire resistance measurement.

#### **Current clamp input**

Connect the optional DC current clamp to measure resistances with both sides earthed.

**Optional current clamp** 

**Optional Kelvin clamp lead set** Optional 200A Kelvin lead set-current injected and sense voltage measured using one clamp.

#### **Optional extension lead sets** Optional output and sense extension lead sets

Lightweight and portable

6.9kg

1-200A test current

**0.1** $\mu\Omega$ -**5** $\Omega$  resistance

<sup>Flexible</sup> USB data storage

**Standard lead set** High quality 3m 200A output leads in carry case supplied with unit.

Tel testa origina



A USB keyboard and 2Gb USB memory key are supplied with the DMO200.

#### Test current presets

Programmable buttons to set test currents. Set to 50A, 100A and 200A by default.

#### Universal supply

90-264V supply voltage with no restriction on output current.

#### Comment

Press this button to enter a new comment on the keyboard.

#### Colour LCD Simultaneous display of


current, mV and resistance.

# available in 3m, 5m and 10m lengths.



#### Example Applications Busbar joint resistance

The DMO200 is ideal for measuring busbar joint resistance. Before making connections ensure that the supply is off and necessary earths have been applied. Connect the high current leads to the busbar, ensuring that the joint resistance to be measured is in the circuit. Connect the sense leads as close as possible to the joint to be measured. Select the desired test current using one of the preset test currents (or use the adjust knob to set a custom test current). Switch the output on, and the current rises to the preset current. Switch the output off again, and the reading is held on the display.

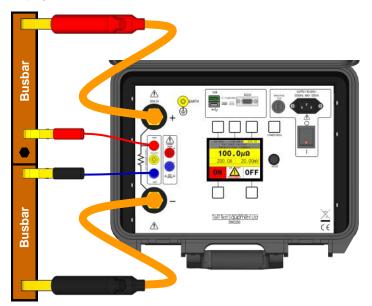

#### **Storing results**

The DMO200 is supplied with a USB memory key and USB keyboard for storing annotated results. To enter or edit a comment tap the COMMENT/MENU button. The comment can then be edited using the keyboard. This comment is stored with each result until a new comment is entered. Each time the output of the unit is switched off the readings from the unit are saved to the USB memory key in CSV format along with the date, time and your comment.

The CSV file can be opened with any spreadsheet program such as Microsoft Excel<sup>™</sup> or OpenOffice Calc.

A	В	C	D	E	F	G	н	1	J	100
DMO200	V1.00	C01								
Time	Date	Current	V	ohm	Re	Comment				
10:00:00	10/05/2010	200	2.00E-04	1.00E-06	Y	South switchyard breaker 3 phase A				
10:01:10	10/05/2010	200	2.04E-04	1.02E-06	Y	South switchyard breaker 3 phase B				
10:02:13	10/05/2010	200	2.02E-04	1.01E-06	Y	South swit	chyard br	eaker 3 ph	ase C	
10:00:00	10/05/2010	200	2.00E-04	1.00E-06	Y	South swit	chyard br	eaker 4 ph	ase A	
10:01:10	10/05/2010	200	2.04E-04	1.02E-06	Y	South swit	chyard br	eaker 4 ph	ase B	
10:02:13	10/05/2010	200	2.02E-04	1.01E-06	Y	South swit	chyard br	eaker 4 ph	ase C	
FH 10	0000 / 🖘 /	-				4		11		* 1
	DMO200 Time 10:00:00 10:01:10 10:02:13 10:00:00 10:01:10 10:02:13	DMO200 V1.00   Time Date   10:00:00 10/05/2010   10:01:10 10/05/2010   10:02:13 10/05/2010   10:01:10 10/05/2010   10:02:13 10/05/2010   10:02:13 10/05/2010	DMO200 V1.00 C01   Time Date Current   10:00:00 10/05/2010 200   10:01:10 10/05/2010 200   10:02:13 10/05/2010 200   10:02:13 10/05/2010 200   10:02:13 10/05/2010 200	DMO200 V1.00 C01   Time Date Current V   10:00:00 10/05/2010 200 2.00E-04   10:01:10 10/05/2010 200 2.04E-04   10:02:13 10/05/2010 200 2.02E-04   10:01:10 10/05/2010 200 2.04E-04   10:01:11 10/05/2010 200 2.04E-04   10:02:13 10/05/2010 200 2.02E-04	DMO200 V1.00 C01 v ohm   Time Date Current V ohm   10:00:00 10/05/2010 200 2.00E-04 1.00E-06   10:01:10 10/05/2010 200 2.04E-04 1.02E-06   10:02:13 10/05/2010 200 2.02E-04 1.01E-06   10:00:00 10/05/2010 200 2.02E-04 1.02E-06   10:01:10 10/05/2010 200 2.04E-04 1.02E-06   10:02:13 10/05/2010 200 2.02E-04 1.01E-06	DMO200 V1.00 C01 V ohm Re   10:00:00 10/05/2010 200 2.00E-04 1.00E-06 Y   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y   10:00:00 10/05/2010 200 2.02E-04 1.02E-06 Y   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y   10:02:13 10/05/2010 200 2.04E-04 1.02E-06 Y   10:02:13 10/05/2010 200 2.04E-04 1.02E-06 Y	DMO200 V1.00 C01 ohm Re: Comment   10:00:00 10/05/2010 200 2.00E-04 1.00E-06 Y South swith   10:00:10 10/05/2010 200 2.04E-04 1.02E-06 Y South swith   10:00:10 10/05/2010 200 2.04E-04 1.02E-06 Y South swith   10:00:00 10/05/2010 200 2.02E-04 1.01E-06 Y South swith   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South swith   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South swith   10:02:13 10/05/2010 200 2.02E-04 1.01E-06 Y South swith	DMO200 V1.00 C01 Re. Comment   Date Current V ohm Re. Comment   10:00:00 10/05/2010 200 2.00E-04 1.00E-06 Y South switchyard br   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard br   10:02:13 10/05/2010 200 2.02E-04 1.01E-06 Y South switchyard br   10:00:00 10/05/2010 200 2.04E-04 1.00E-06 Y South switchyard br   10:01:10 10/05/2010 200 2.04E-04 1.00E-06 Y South switchyard br   10:02:13 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard br   10:02:13 10/05/2010 200 2.02E-04 1.01E-06 Y South switchyard br	DMO200 V1.00 C01 V ohm Re Comment   10:00:00 10/05/2010 200 2.00E-04 1.00E-06 Y South switchyard breaker 3 ph   10:01:10 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 3 ph   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 3 ph   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 4 ph   10:01:10 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 4 ph   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 4 ph   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 4 ph	DMO200 V1.00 C01   Time Date Current V ohm Re: Comment   10:00:00 10/05/2010 200 2.00E-04 1.00E-06 Y South switchyard breaker 3 phase A   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard breaker 3 phase A   10:02:13 10/05/2010 200 2.02E-04 1.02E-06 Y South switchyard breaker 3 phase A   10:02:13 10/05/2010 200 2.02E-04 1.00E-06 Y South switchyard breaker 4 phase A   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard breaker 4 phase A   10:01:10 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard breaker 4 phase A   10:02:13 10/05/2010 200 2.04E-04 1.02E-06 Y South switchyard breaker 4 phase A   10:02:13 10/05/2010 200 2.02E-04 1.01E-06 Y South switchyard breaker 4 phase A




ASRAS CO.,LTD. 1694, 1694/1 Prachasongkhro Road, Dindaeng, Dindaeng, Bangkok 10400 Tel. 02-692-3980, Fax. 02-692-3978 E-mail: sales@asras.com www.asras.com; www.asras.co.th

#### **Circuit breaker contact resistance**

The DMO200 is suited to all low resistance measurements on power systems, and is particularly suited to measuring contact resistances on substation circuit breakers, isolators and grounding equipment. The unit has a powerful output capable of driving 200A through 20m output leads to reach the contacts of even the largest circuit breakers. Optional output lead extensions are available which extend the high current and sense leads by 3, 5 or 10m.

Accurate measurements on circuit breakers, isolators and grounding links with both sides earthed are simple with the optional current clamp. This allows the current flowing through the earthing equipment to be subtracted from the test current.

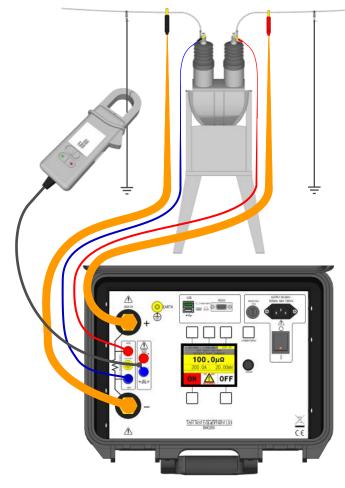

#### Details

Supply requirements:	90-265Vac 1300VA max				
Output:	1-200Adc 5V				
Resistance measurement:	0.1μΩ-5Ω				
DM0200 dimensions:	360 x 290 x 165mm				
DM0200 weight:	6.9kg				
Accessories supplied with unit: Mains lead, user manual					

3m high current leads, 3m sense leads, spare fuses.

#### **Optional accessories**

DM0200 current clamp	Part no. A224-0001
3m Kelvin clamp lead set in plastic case	Part no. A224-0003
Output/sense extension 3m in plastic case	Part no. A224-0004
Output/sense extension 5m in plastic case	Part no. A224-0005
Output/sense extension 10m in plastic case	Part no. A224-0006

Note: Due to the company's continuous research programme, the information above may change at any time without prior notification. Please check that you have the most recent data on the product. T&R Test Equipment Ltd, 15-16 Woodbridge Meadows, Guildford, Surrey, GU1 1BJ, UK

Tel: +44 (0)1483 207428 Fax: +44 (0)1483 511229 email: sales@trtest.com

